



SPARE PARTS EXPLODED VIEW GAS-WALL CONDENSING BOILERS

Model

ECOBLU CPR-SP/A EXT/IN

R8216221-07 - 24/03/2014


ECOBLU CPR-SP/A EXT/IN

Gas-wall condensing boilers


1	3314008	ECOBLU 25 IN CPR MET	06-2008	-
2	3314042	ECOBLU 25 SOLAR IN CPR	04-2010	-
3	3314009	ECOBLU 12 IN SP/A MET	06-2008	05-2011
4	3314010	ECOBLU 25 IN SP/A MET	06-2008	-
5	3314030	ECOBLU 25 EXT CPR MET	07-2009	-


Col	Reference	Model type	Begin	End
-----	-----------	------------	-------	-----













100
200
300
400

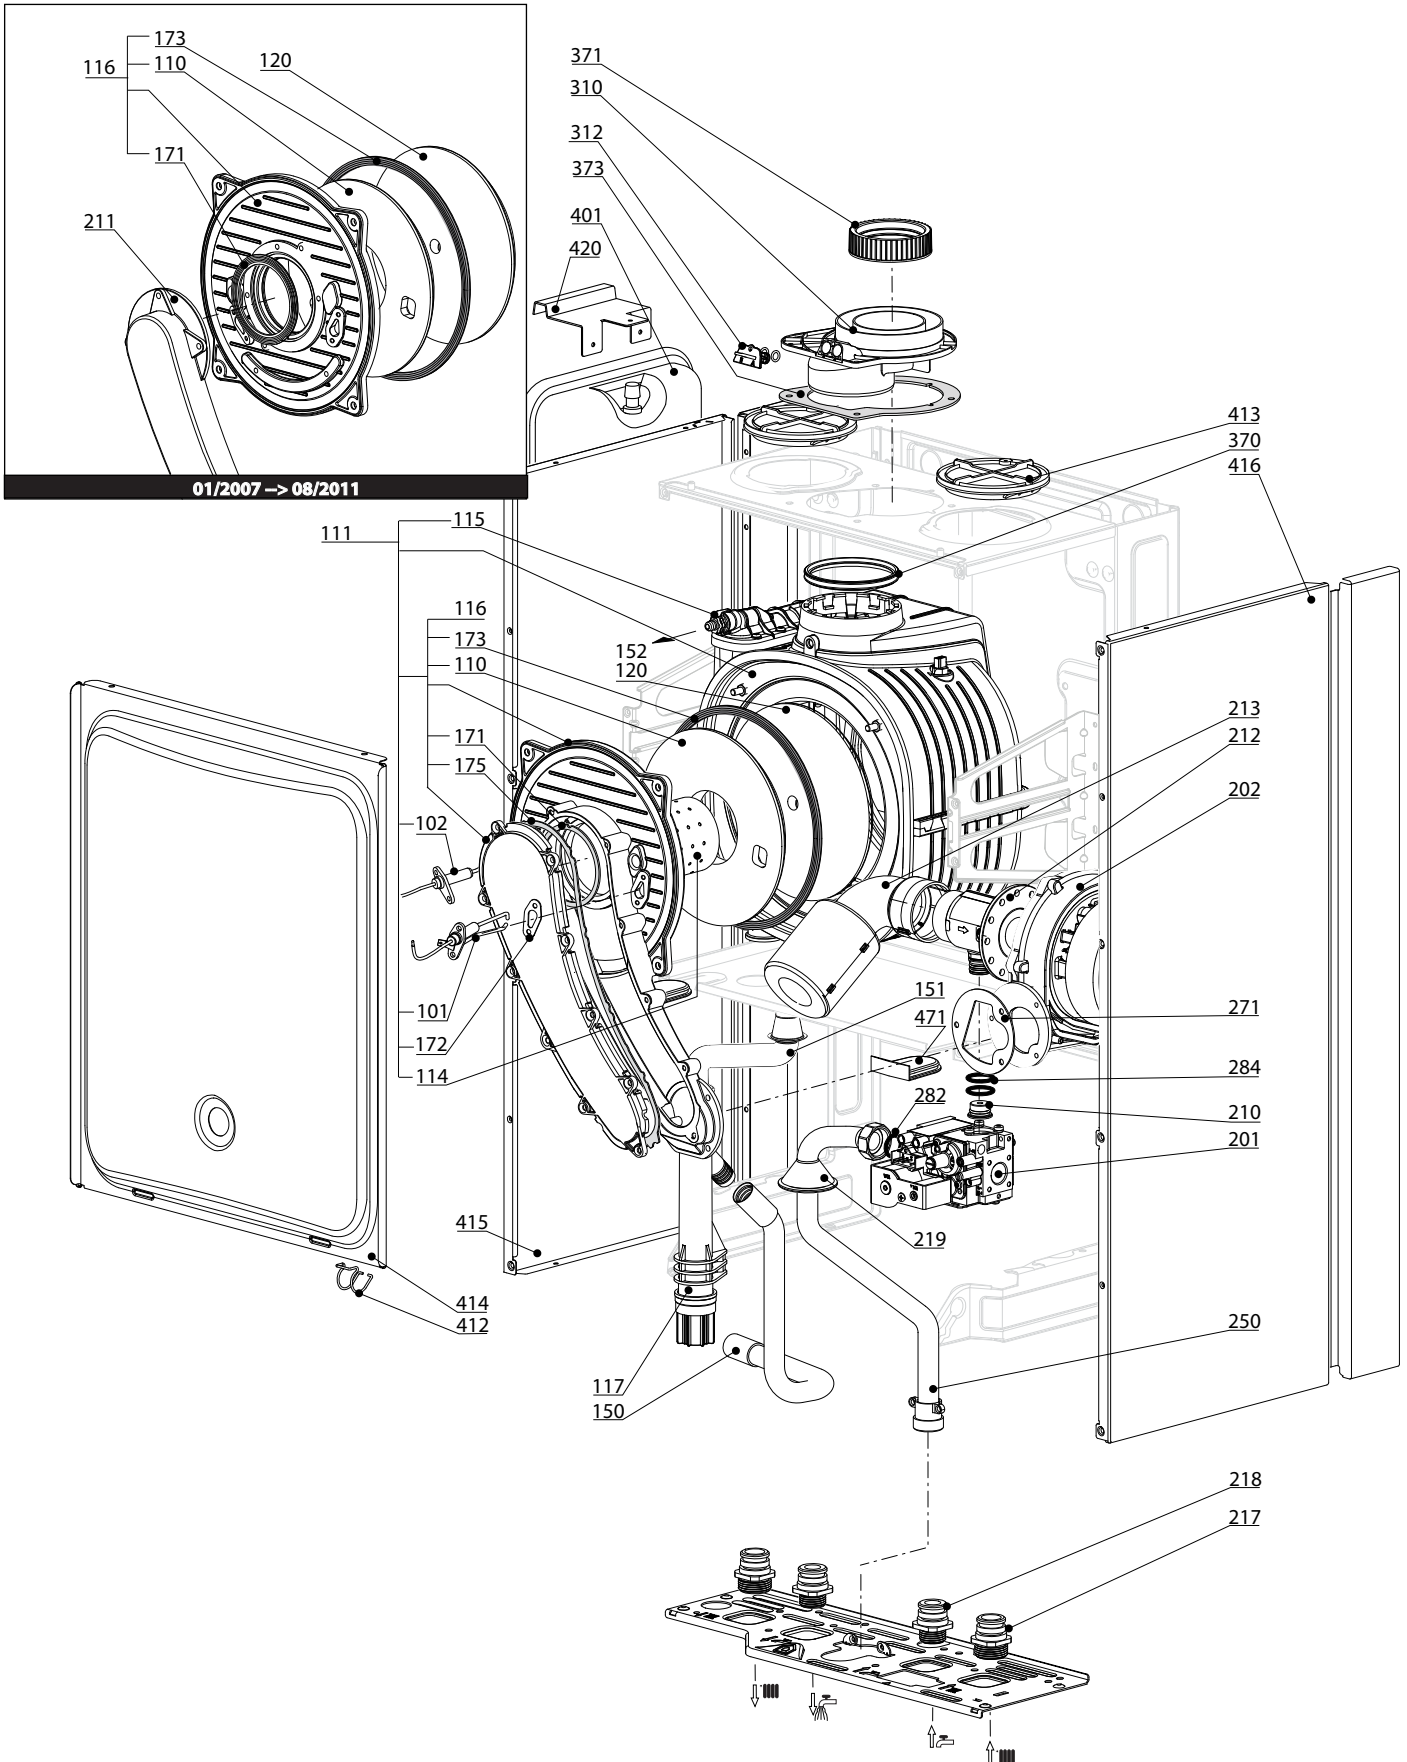


☰	Description	Manf. Pt. N	Type	ECOBLU 25 IN CPR ECOBLU 25 SOLAR IN CPR ECOBLU 12 IN SP/A ECOBLU 25 IN SP/A ECOBLU 25 EXT CPR																		31	
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	From	to
0100	BURNER ASSEMBLY																						
0101	IGNITION ELECTRODE	60000868-01		•	•	•	•	•															
0102	IONIZATION ELECTRODE	60000867-01		•	•	•	•	•															
0110	INSULATION (FRONT PANEL)	60000297		•	•			•															
0111	EXCHANGER 12KW	60001128				•																	
	EXCHANGER 18/24KW	65111608		•	•			•	•										09/11				
	EXCHANGER 24KW	60000292		•	•			•	•												08/11		
0114	BURNER 12-18KW	60000864-01				•																	
	BURNER 18/24KW	60000288-01		•	•			•	•														
0115	AIR SEPARATOR	60000994		•	•			•	•														
0116	DOOR ASSY	60000318		•	•			•	•												08/11		
	DOOR ASSY	60000318				•																	
	DOOR ASSY	65111604		•	•			•	•										09/11				
0117	TRAP	60000987		•	•			•	•														
0120	PANEL (INSULATION - REAR)	65105904		•	•			•	•														
0150	TUBE PVC D:19 L:500	60000976		•	•			•	•														
0151	DISCHARGE PIPE (CONDENSATE)	65107074		•	•			•	•														
0152	SILICONE TUBE D: 8x1 L: 0.15M	60001013		•	•			•	•														
0171	GASKET D:80.6-1.8	60001610		•	•			•	•										09/11				
	GASKET D:85-66.5-2.5	61314753		•	•			•	•												08/11		
	GASKET D:85-66.5-2.5	61314753				•																	
0172	GASKET (IGNITION ELECTRODE)	60000286-01		•	•			•	•														
0173	DOOR GASKET	60000623		•	•			•	•														
0175	GASKET	60001609		•	•			•	•										09/11				
0200	GAS SECTION																						
0201	GAS VALVE	60000537		•	•			•	•														
0202	FAN ASSY	60000622		•	•			•	•														
0210	GAS RESTRICTOR D: 4.50	60000633				•																	
0211	DUCT FIRST SECTION	60000290		•	•			•	•														
0212	VENTURI D: 14MM	65105894				•																	
	VENTURI D: 17MM	60000536		•	•			•	•														
0213	SILENCER	60000539		•	•			•	•												08/11		
	SILENCER	60000539				•																	
	SILENCER	65111609		•	•			•	•										09/11				
0217	UNION (3/4")	65104326		•	•			•	•														
0218	UNION (1/2")	65104327		•	•			•	•														
0219	GROMMET	61010109		•	•			•	•														
0250	PIPE (GAS)	65107075		•	•			•	•														
0271	GASKET	61306072		•	•			•	•														
0282	SHEET GASKET D: 24-18.2-1.5	60022835-01		•	•			•	•														
0284	O-RING 17.76X1.78	61308092		•	•			•	•														
0300	FAN ASSEMBLY																						
0310	FLUE (EXHAUST MANIFOLD/HEADER)	60000523		•	•			•	•														
0312	FLUE INTAKE PLUG	65104295		•	•			•	•														
0370	SEALING RING 80mm	60000315		•	•			•	•														
0371	GASKET	60000316		•	•			•	•														
0373	GASKET	60000317		•	•			•	•														
0400	SEALED CASE																						
0401	EXPANSION VESSEL (7 L. STD)	65101719		•	•			•	•														
0412	SPRING FRONT PANEL (KIT)	65107048		•	•			•	•														
0413	AIR RETURN COVER	65104249		•	•			•	•														
0414	PANEL (FRONT - SEALED CHAMBER)	65105678		•	•			•	•														
0415	PANEL (L.H. SIDE)	65107068		•	•			•	•														
0416	PANEL (R.H.SIDE)	65107067		•	•			•	•														
0420	EXPANSION VESSEL SUPPORT	65107069		•	•			•	•														
0470	CABLE INLET RUBBER WASHER	60000540		•	•			•	•														
0471	CABLE INLET RUBBER WASHER	60000541		•	•			•	•														

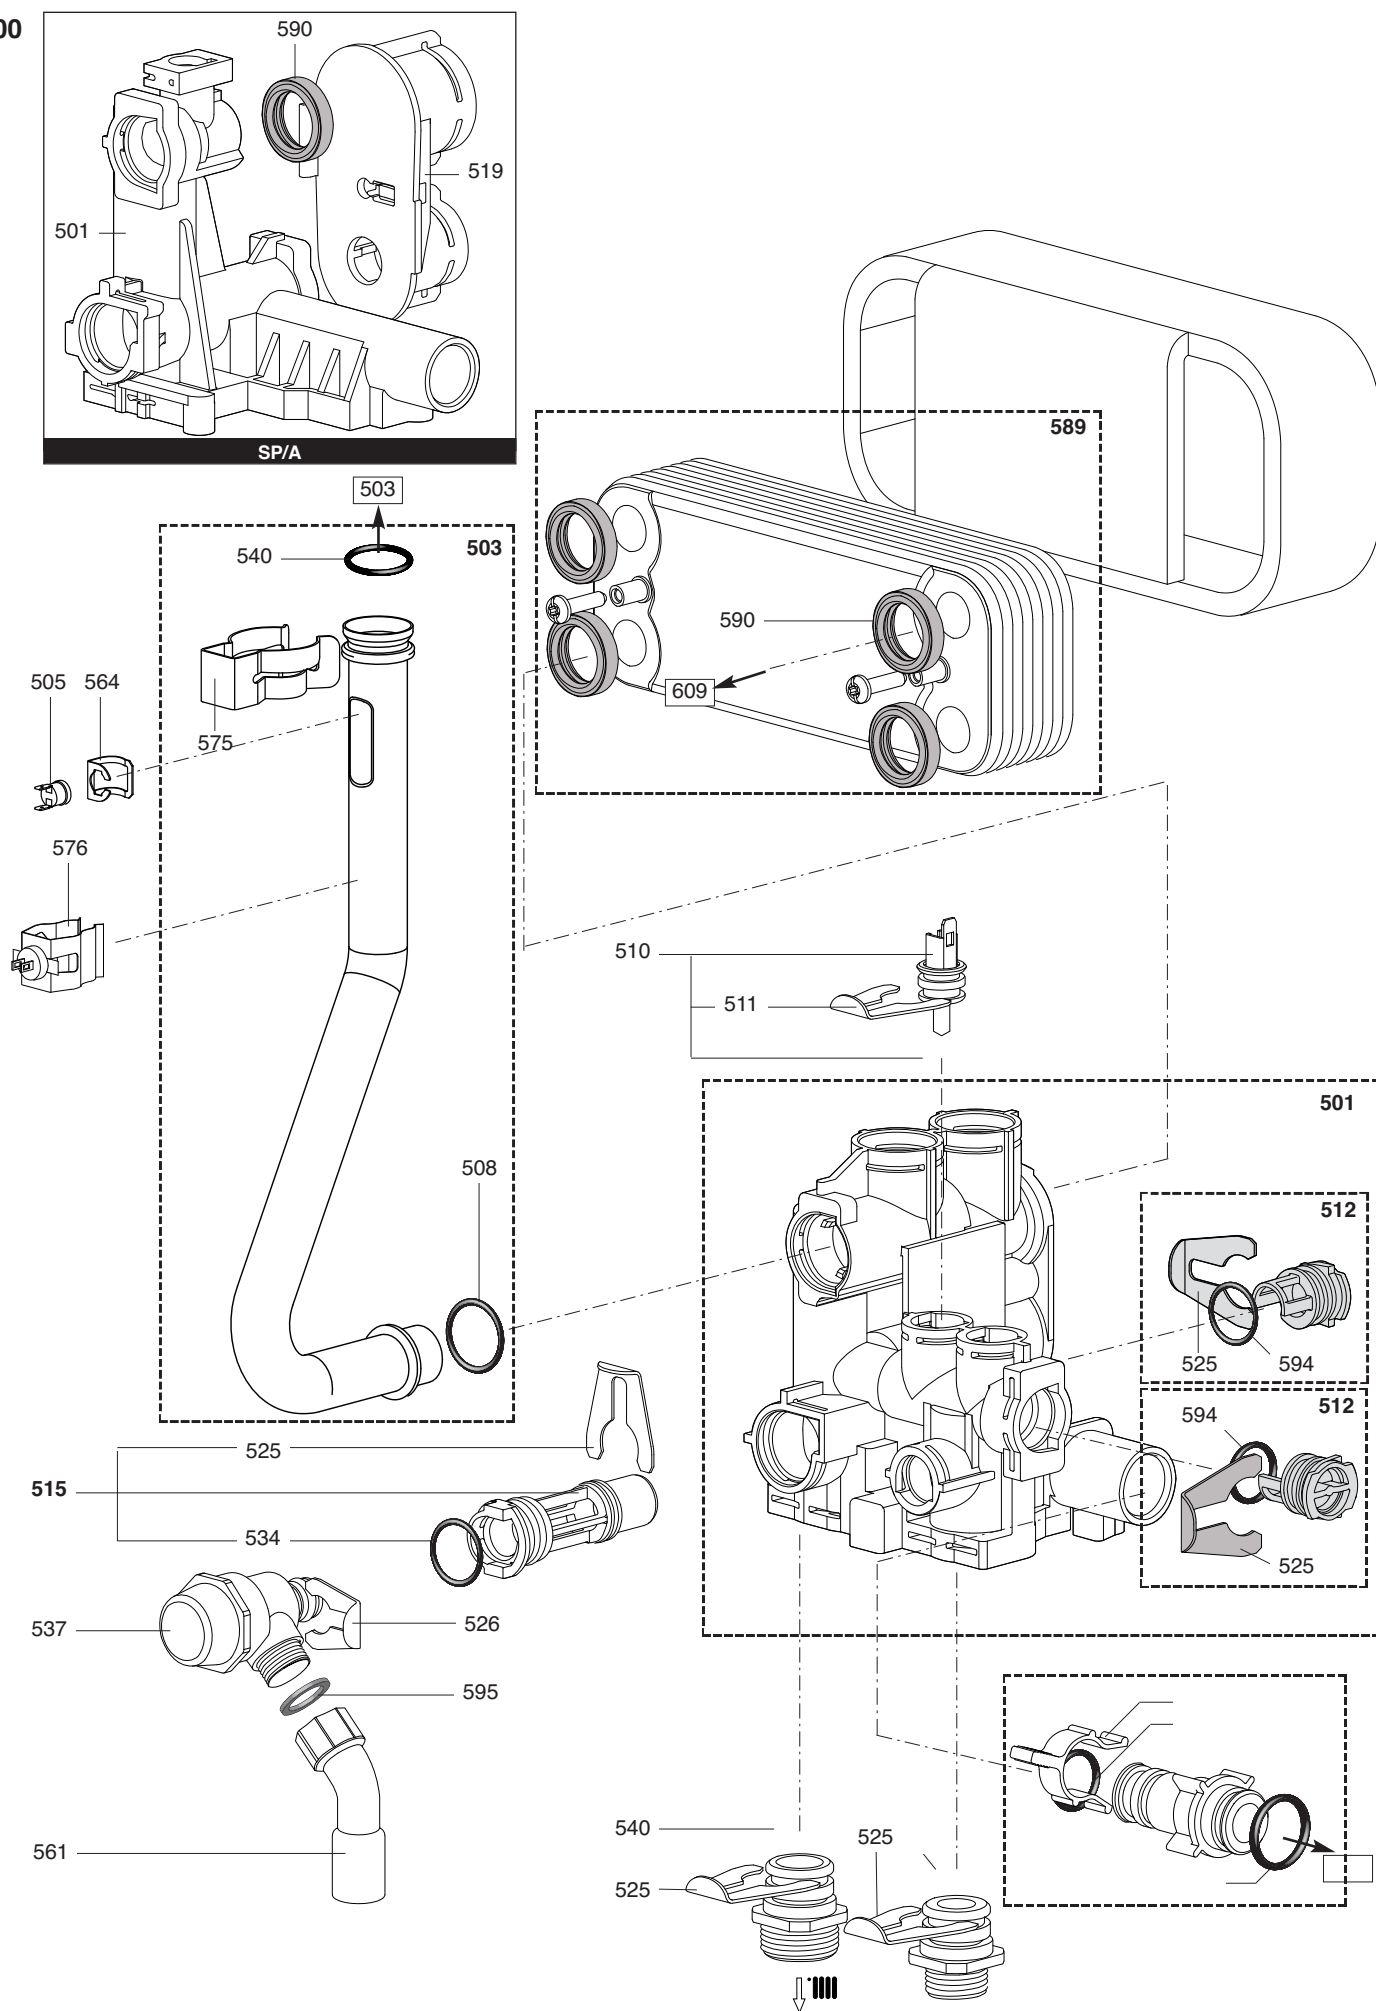

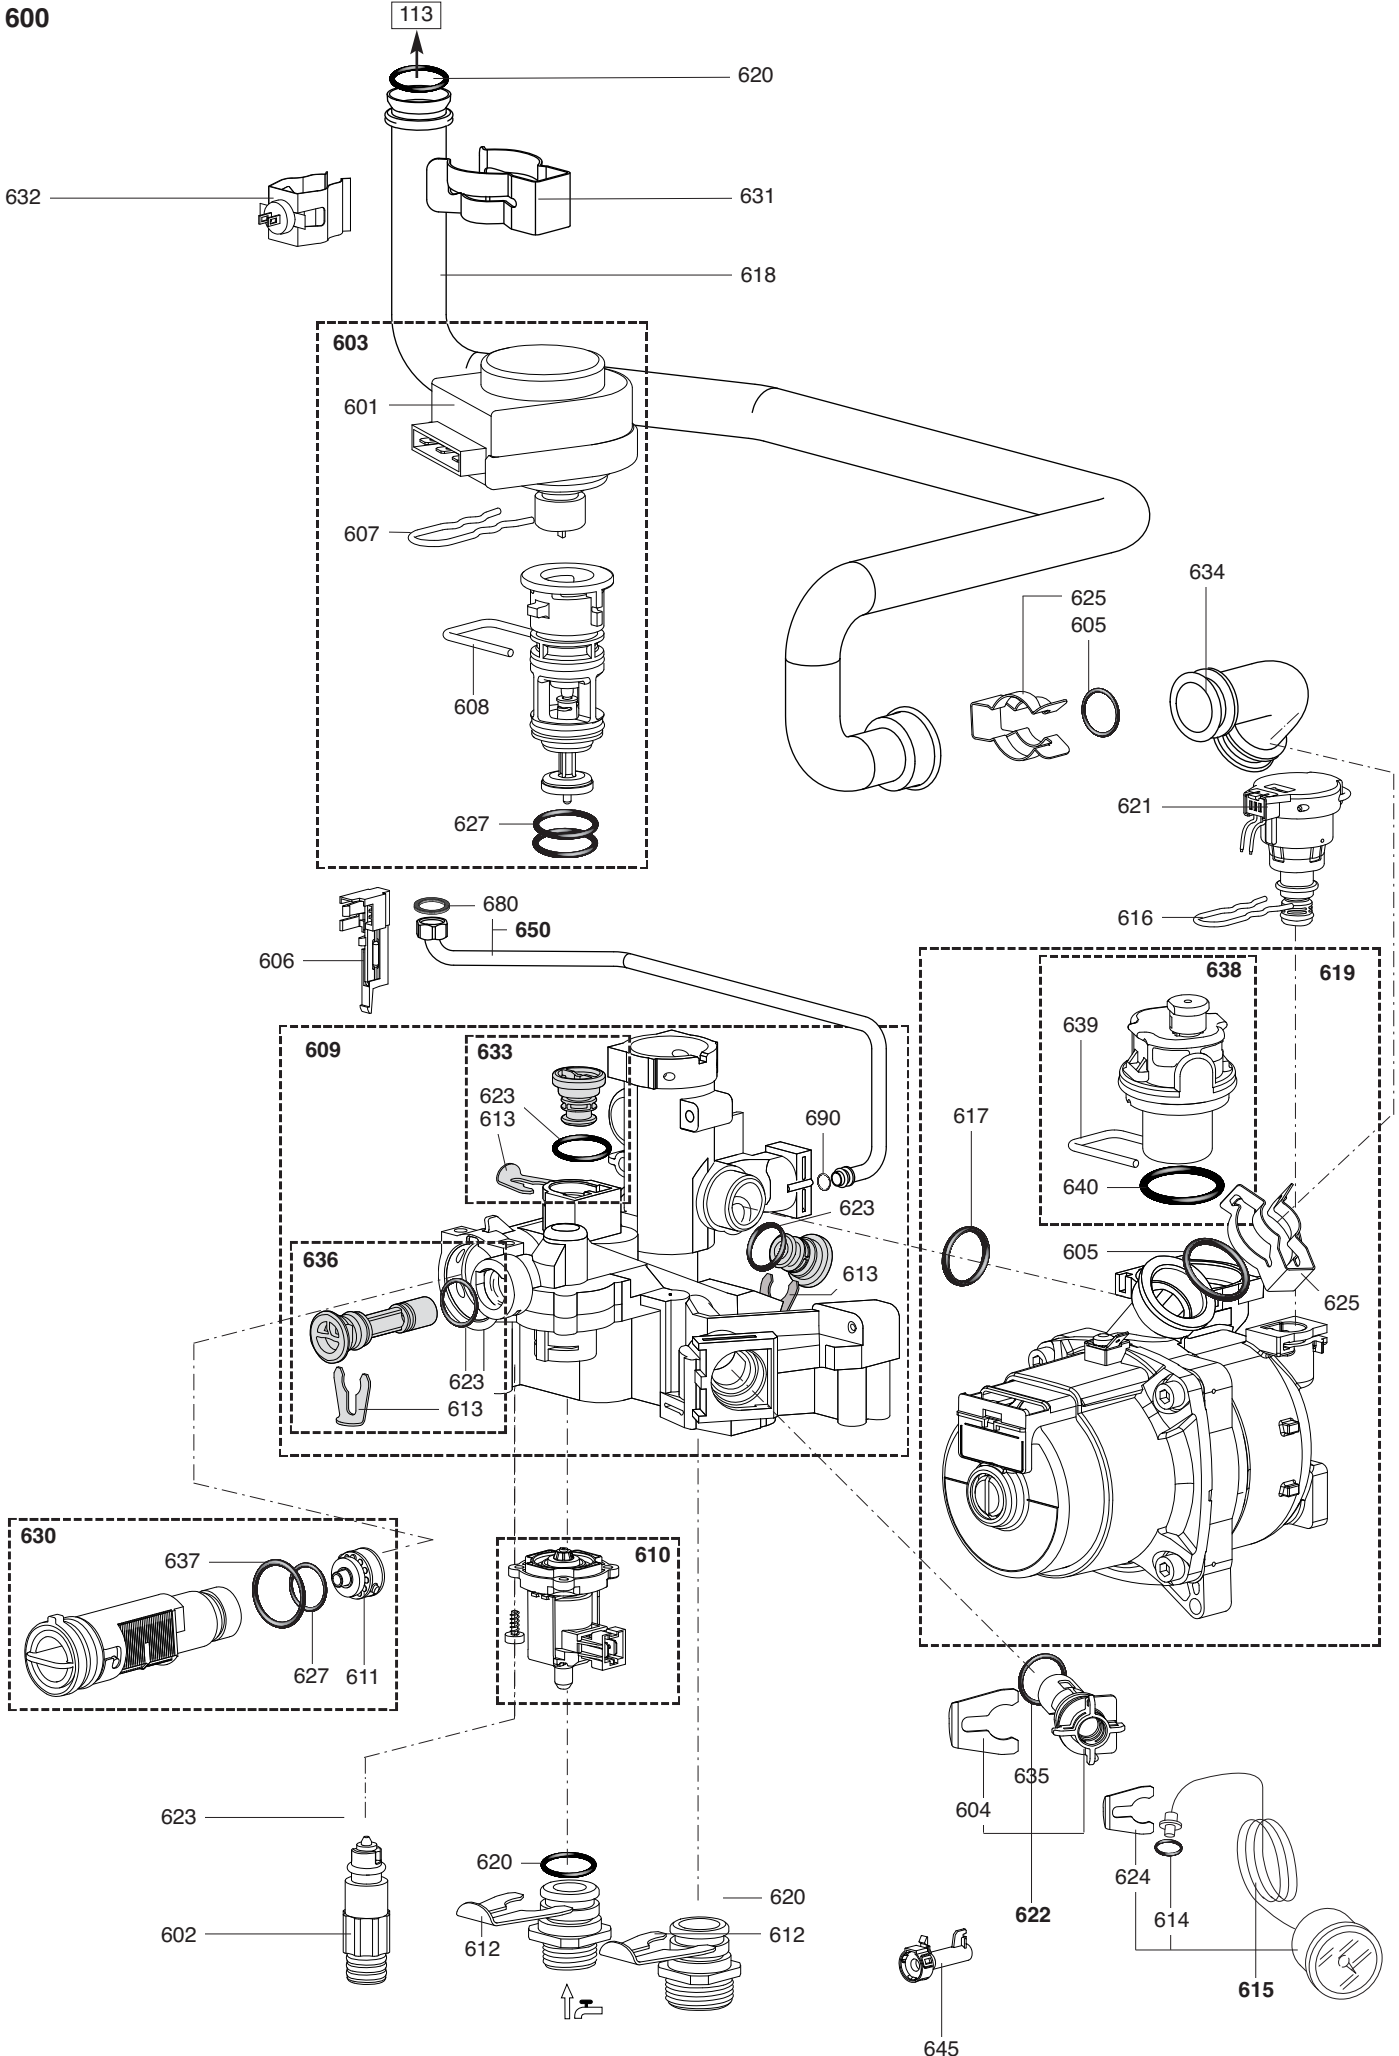


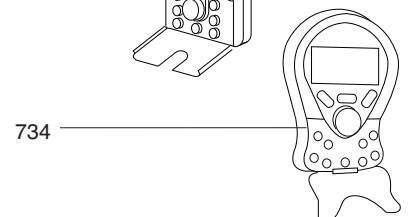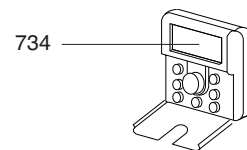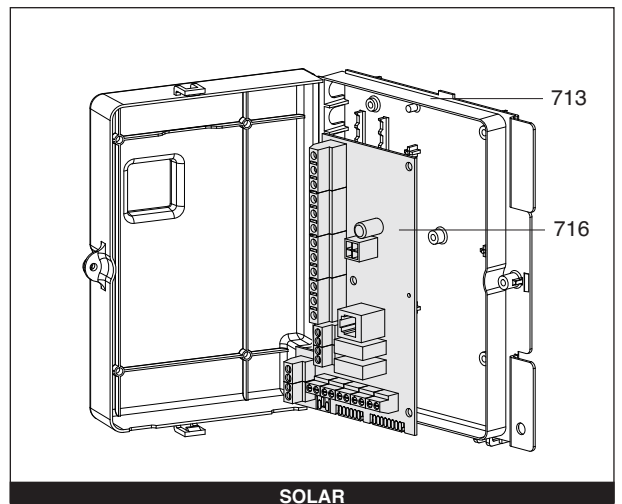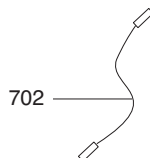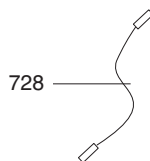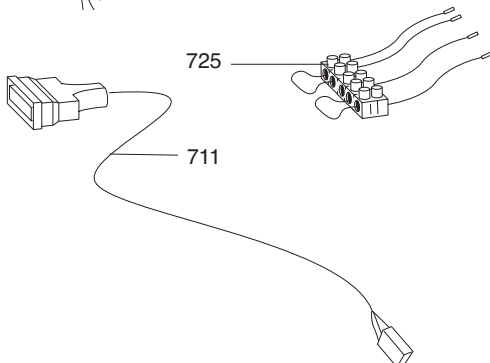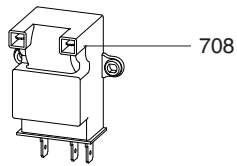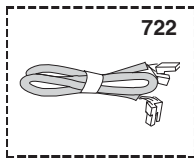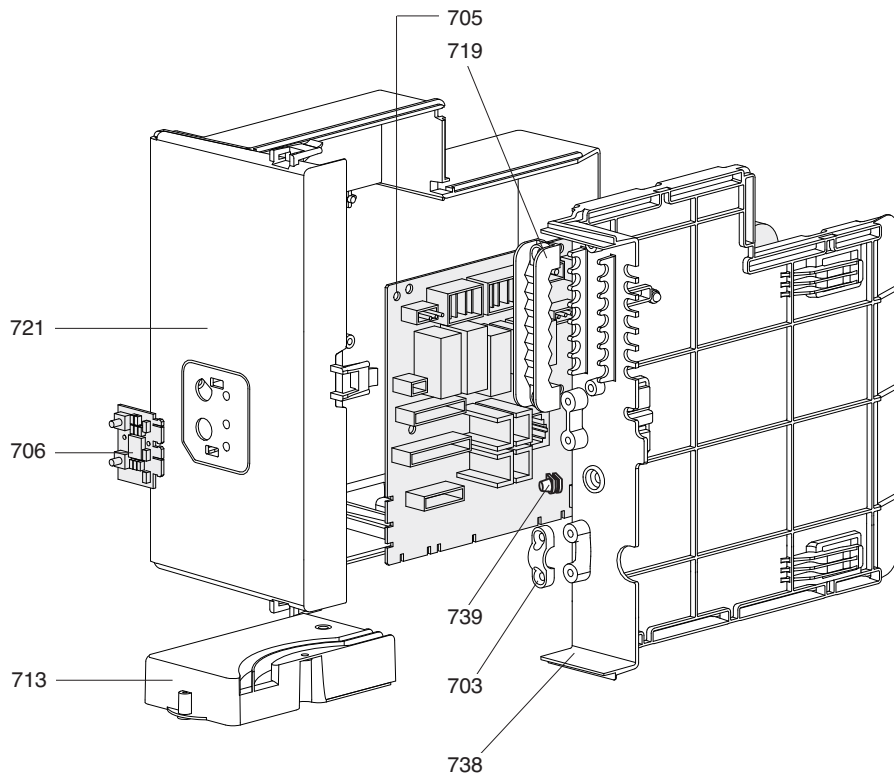


800

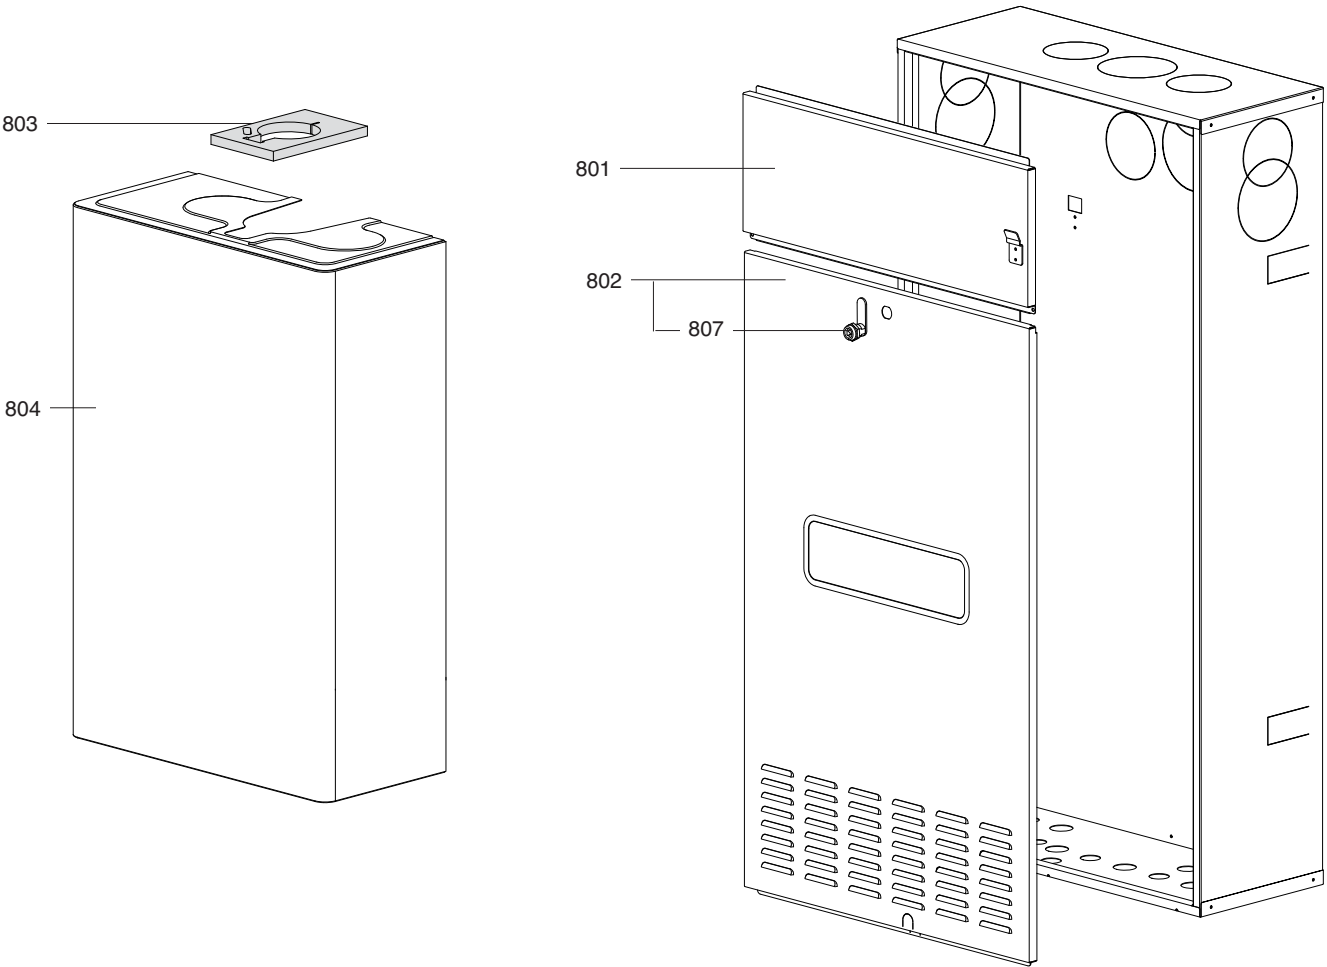

900

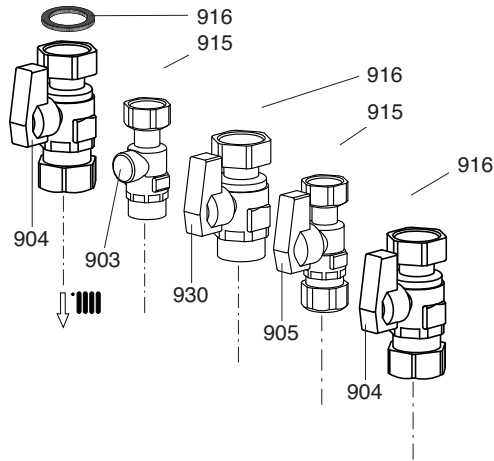

900

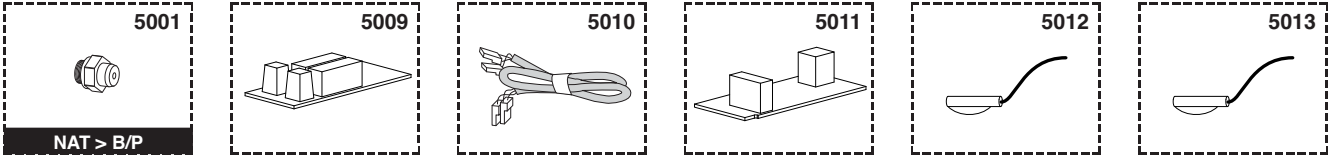

Gas-wall condensing boilers

LIST OF THE ABBREVIATIONS

HW	: Hot water.
CW	: Cold water.
C	: Ceramic resistance (normal heating).
Ca	: Ceramic resistance (accelerated heating)
TP	: Immersion heater.
1F	: With fittings.
2F	: Without fittings.
3F	: With fittings and another outlet connection.
AMI	: With mixing valve.
SMI	: Without mixing valve.
PUISS	: Power of th appliance.
PN	: Appliance with normal pression.
LP	: Appliance with low pression.
PV	: Appliance with variable power.
PF	: Appliance with fixed power.

IDENTIFICATION PLATE

SERIAL NUMBER

10 Characters :	04 05 125 011				
					Sequential number
					Manufacturing day
					Year of manufacture
11 Characters :	1 95 065004 - 31				
Month of manufacture : from 1 to 9 → Jan. to Sep., O → Oct., N → Nov., D → Dec.					Technical number of the appliance
					Sequential number
					Year of manufacture
19 Characters :	08 05 0013199 900640031				
Year of manufacture					Product reference
Month of manufacture					Sequential number
20 Characters :	3675007 XX 2 07 070 00315				
Product reference					Sequential number
Millenium of manufacture					Manufacturing day
					Year of manufacture
21 Characters :	3675007 XX 07 070 0000315				
Product reference					Sequential number
Year of manufacture					Manufacturing day